



Sauer-Danfoss HWD MC38-10/12 10108175

Revision History

This file contains important supplementary and late-breaking information that may not appear in the main product documentation. We recommend that you read this file in its entirety.

Version 10108175v140 (February 2010)

Version 1.40: What is New

- Added correct label in the hardware tab.

Version 1.40: Known issues

- The memory calculation would not be correct, when the ReadOnlyParameters is in ENABLE mode. The total amount of ROM should be reduced with 8,192 to get the correct calculation.

Version 10108175v130 (January 2010)

Version 1.30: What is New

- The HWD supports MC38-12 as well as MC38-10.

Version 1.30: Known issues

- The memory calculation would not be correct, when the ReadOnlyParameters is in ENABLE mode. The total amount of ROM should be reduced with 8,192 to get the correct calculation.

Version 10108175v120 (August 2009)

Version 1.20: What is New

Version 1.20: Known issues

- The memory calculation would not be correct, when the ReadOnlyParameters is in ENABLE mode. The Total amount of ROM should be reduced with 8,192 to get the correct calculation.

Version 10108175v110 (April 2009)

Version 1.10: What is New

- Signal Power.On was added.

Version 1.10: Known issues

- The memory calculation would not be correct, when the ReadOnlyParameters is in ENABLE mode. The Total amount of ROM should be reduced with 8,192 to get the

correct calculation.

Version 10108175v100 (April 2009)

Version 1.00: What is New

- Everything, new unit

Version 1.00: Known issues

- The memory calculation would not be correct, when the ReadOnlyParameters is in ENABLE mode. The Total amount of ROM should be reduced with 8,192 to get the correct calculation.

Product Information on the Web

For technical information (e.g. how to connect inputs and outputs), visit the Sauer-Danfoss PLUS+1 website:

(www.sauer-danfoss-plus1.com).

Telephone support can be obtained by calling:

North America: Toll free number 1-888-50PLUS1 (1-888-507-5871)

Europe: +46 476-569 06

Please report all suggested enhancements and ideas to www.sauer-danfoss-plus1.com

[helpdesk@sauer-](mailto:helpdesk@sauer-danfoss-plus1.com)

[danfoss-plus1.com](mailto:helpdesk@sauer-danfoss-plus1.com)
Please report all defects to helpdesk@sauer-danfoss-plus1.com

Disclaimer

The Sauer-Danfoss Software License Agreement completely defines the licensed use of this software.

Information in this document is provided in connection with Sauer-Danfoss PLUS 1 Tool set. No license, express or implied, to any intellectual property rights is granted by this document. Sauer-Danfoss disclaims all warranties and liabilities for the use of this document and the information contained herein and assumes no responsibility for any errors, which may appear in this document, nor does Sauer-Danfoss make a commitment to update the information contained herein. Sauer-Danfoss reserves the right to make changes to this document at any time, without notice.

Copyright

©2004-2010 Sauer-Danfoss, Inc. All rights reserved.

Third party trademarks and brand names are the property of their respective owners.

